

Queensize

C A M P E R

IMPORTANT ASSEMBLY INSTRUCTIONS for Queensize Camper sink “Vanlife”

Congratulations on your purchase of the **Queensize Camper** sink. You have chosen not only a stylish, but also a high-quality product. Below, you will find important assembly instructions for mounting the sink and assembling the low profile drain set that comes with the delivery.

This package includes the following items:


- 1× Vanlife sink
- 1× Low profile drain set
- 1× Bracket set for top mount
- 1× Bracket set for under mount
- 1× Template for the cutout with top mounting

SURFACE AND BELOW SURFACE MOUNTING:

1 TOPMOUNT

To mount the sink with the rim **on the surface of the counter top** (top mount), use the provided template to cut out the counter top. Then, attach the top mounting brackets from below to the retaining clips to secure the sink, and tighten the screws.

For an even more elegant solution, you can also **let the sink in from above** ("inset top mount") and close the cutout with a cutting board. In this case, the board rests on the whole rim.

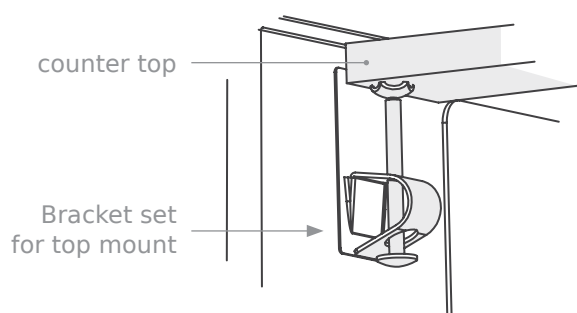

2 UNDERMOUNT


To mount the sink with its rim under the counter top (under mount), choose a cutout that matches exactly the side walls of the sink or a few millimeters larger, if you want to close the sink with the cut-out piece of the counter top.

Use the brackets with slotted holes to fasten the sink without damaging the counter top. Be cautious when using the brackets to prevent the sink from slipping during the assembly process or if the silicone seal is not fully hardened.

A silicone gasket is not part of the delivery. We recommend commercial kitchen silicone or sanitary silicone.

As an alternative to the brackets, drill holes with a diameter of approximately 4 mm into the rim of the sink and screw it straight from below into the counter top. Use wood screws. Note that this method prevents the sink from being mounted on the surface afterwards because the rim shows drill holes.

Important: Remember to choose the right screws for the worktop thickness, and seal the gap between the sink and counter top with a suitable sealant, such as silicone, after mounting to prevent water or dirt from penetrating.

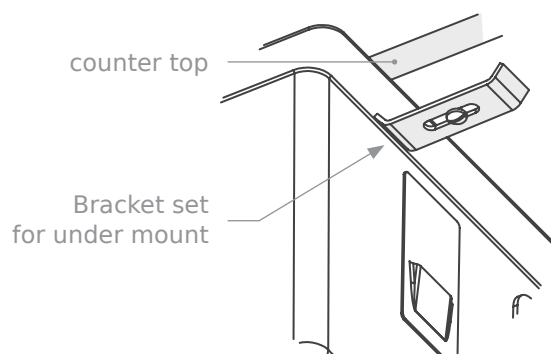


LOW PROFILE DRAIN SET

A low profile drain set is included with every Queensize Camper sink, which reduces the overall height of the installation significantly compared to conventional drain sets.

The sink is placed between position 4 and position 5. When tightening the screw in position 2, be careful to avoid damaging the thread in the closure at position 11. Attach the drain hose at the nozzle in

position 8, which is suitable for both 19 mm and 25 mm inner hose diameter.


If you are using a 25 mm hose, cut off the area for 19 mm and deburr the cutting edges inside and outside before securing the hose carefully with a hose clamp.

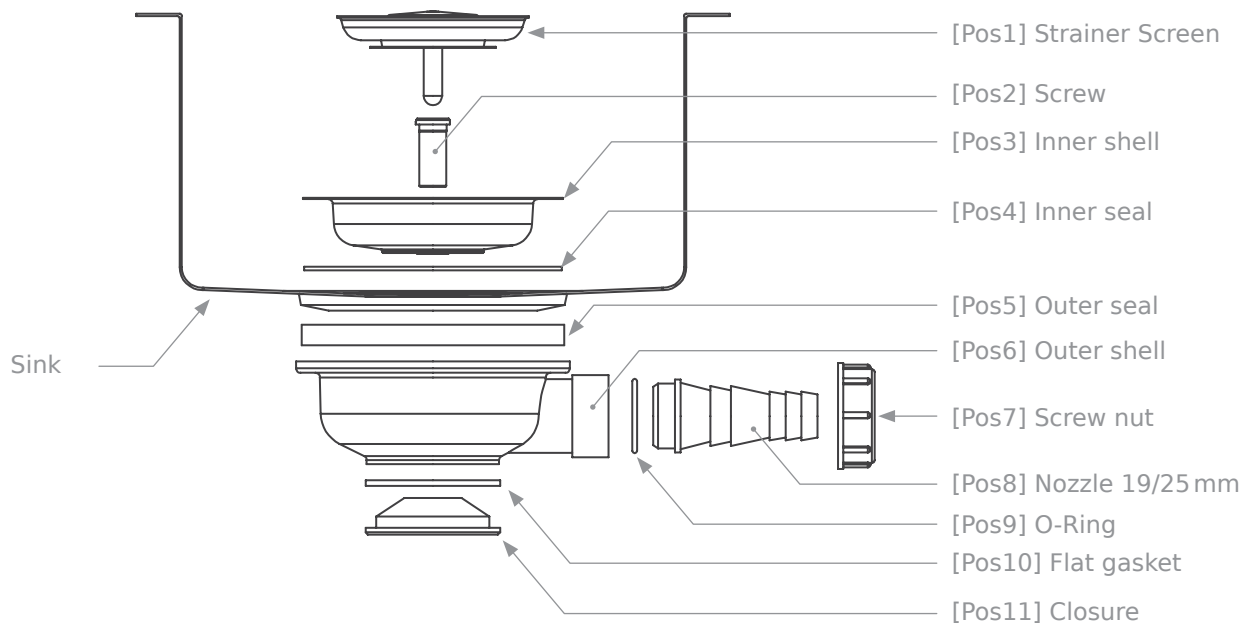

► **NOTE:** The appropriate dimensional drawing can be found in the download area of the corresponding product on our website

► tigerexped.de

We hope you enjoy building your travel vehicle!

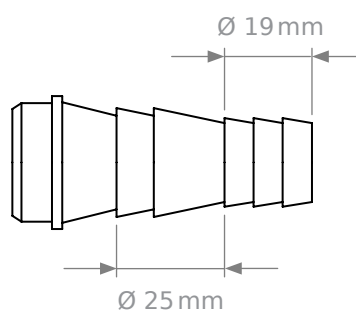

tigerexped